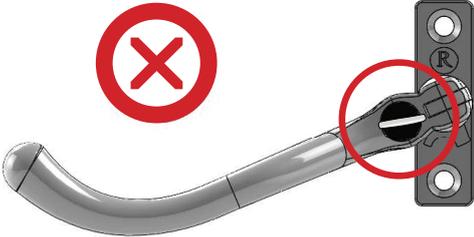
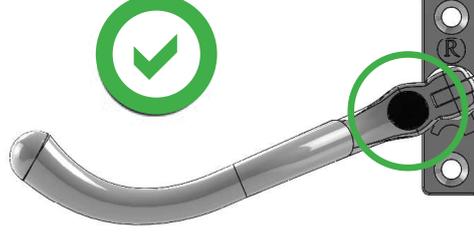
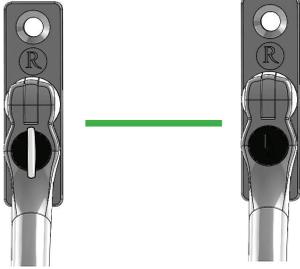


Standard Monkey Tail and Pear Drop Window Handles

Instructions for use & maintenance

How to keep your window handles working smoothly for longer

We recommend that once you have locked or unlocked your windows you remove the key before operation of the handle. By leaving the key in, even a slight rotation of the key could hinder operation, as seen in the diagram below.

| | |
|---|---|
|  | <p>We recommend the key is removed before operation of the handle. If the key is left in and not inline with the handle, the operation will be forced and may damage the locking mechanism.</p> <p>DO NOT force the handle if the key is still present or tension is felt during normal operation.</p> |
|  | <ul style="list-style-type: none"> - To lock the handle, rotate the key 180° clockwise to its furthest point. - To unlock the handle, rotate the key 180° anti-clockwise to its furthest point. |
|  | <p>When locked be sure to rotate the key a full 180° anti-clockwise and remove the key before attempting to operate the handle and open your windows.</p> <p>By following these simple guidelines, your handles will open and close easily and last longer.</p> |

Maintenance Instructions

To retain the highest corrosion resistance it is necessary to keep the surfaces clean. This can be done by wiping with a clean cloth using warm clean water and drying with a soft cloth.

- Do not use abrasive, chemical or brass cleaners, wire brushes, scrubbers and wire wool etc.
- Do keep clean and free from dirty deposits which may attack the finish.
- Avoid contact with sharp objects which may cut into the finish.

For further assistance, call 01702 613733

www.climatec-windows.co.uk

11-14 Fletchers Square, Temple Farm Industrial Estate, Southend-on-Sea, Essex SS2 5RN