FITTING & ADJUSTMENT INSTRUCTIONS




Climatec Windows & Doors


SFS intec

SFS DYNAMIC 2D DOOR HINGE FOR RESIDENCE DOORS - OPEN IN


FITTING INSTRUCTIONS

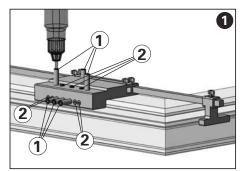


Fix the jig in the right position. Drill in correspondence of bushes 1 with a drill bit Ø 7,2 mm and in correspondence bushes 2 with a drill bit Ø 3,0 mm.

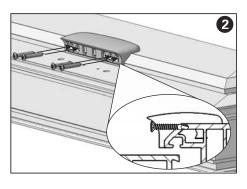


Fasten the sash plate with screws M 3,9 x 38 mm.

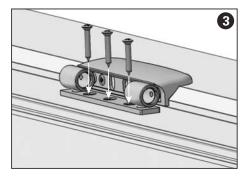

Fasten the frame plate with fastener 3,9 x 38 n **IMPORTANT:** trim the of the rings towards the plate.

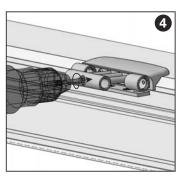


Twist in the central ring lining it to the lateral rings.

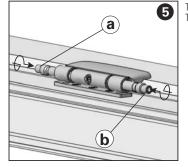

Twist in pin **a** flush fit to the upper ring. Twist in pin **b** till it touches the central rin

Fit the cover cap on the central ring (sash part)

7

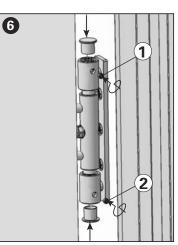

Fit the caps and fasten the security screws 1 and 2

Continue over for Adjustment instructions

For further assistance, call 01702 613733

www.climatec-windows.co.uk

11-14 Fletchers Square, Temple Farm Industrial Estate, Southend-on-Sea, Essex SS2 5RN

FITTING & ADJUSTMENT INSTRUCTIONS




SFS intec


Remove the cover cap



SFS DYNAMIC 2D DOOR HINGE FOR RESIDENCE DOORS - OPEN IN

ADJUSTMENT INSTRUCTIONS

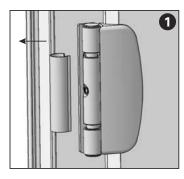

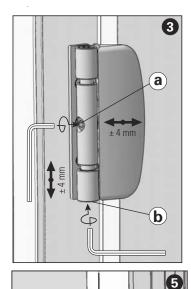



1

2

Horizontal adjustment: adjust by turning screw a with a 5 mm Allen Key. Height adjustment: adjust by turning screw b with a 5 mm Allen Key.

Fit the caps and fasten the security screws 1 and 2 $\,$

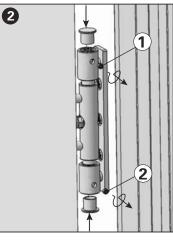

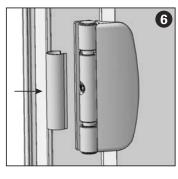

Unscrew the security screws and remove the caps

In difficult situations it is possible to have the horizontal adjustment from inside turning the hegagonal recess with the special key.

Fit the cover cap on the central ring (sash part)

For further assistance, call 01702 613733

www.climatec-windows.co.uk

11-14 Fletchers Square, Temple Farm Industrial Estate, Southend-on-Sea, Essex SS2 5RN