

## **SEALED UNIT WEDGING INSTRUCTIONS**









Window

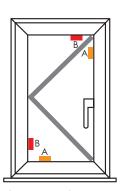


Side Hung Casement Window



**Top Hung Casement** Window

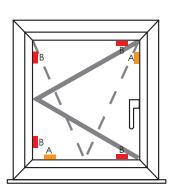

Tilt and Turn Casement Window

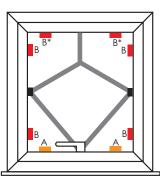

Fully Reversible Casement Window




A = Load bearing setting blocks, 100mm long, approximately 100mm from each corner




B = Location blocks


B\* = Become load bearing blocks with sash rotated

Note: Additional packing may be required around the hardware keeps, pull-in wedges etc.

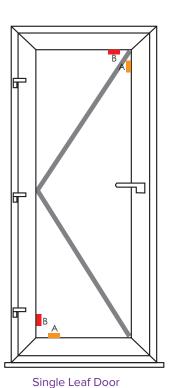

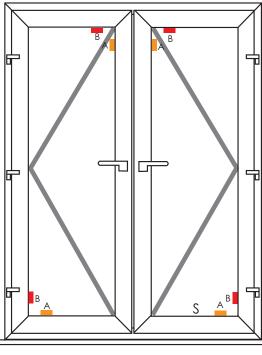



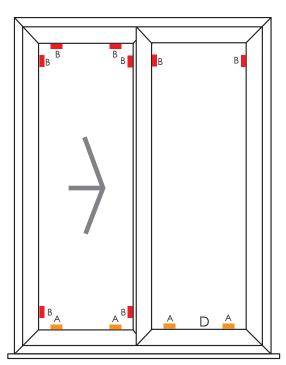

In Line Patio Door

## For further assistance, call 01702 613733

www.theclimatecgroup.co.uk